

WARRANTY

- This dispenser device is covered by a **12-month warranty from the date of purchase** against all faults of manufacturer.
- This warranty is limited to repair or replacement, at option of manufacturer.
- The purchaser should complete the online warranty registration at **www.lurelogik.com** within thirty (30) days of purchase.
- The warranty may be voided if:
 - The online warranty registration was not duly completed within thirty (30) days of purchase and proof of purchase cannot be supplied when calling Customer Care;
 - The problem is due to improper, rough or careless treatment;
 - The problem is caused by abnormal use or by not following the instructions included in this kit;
 - The damage is due to shock, fire, chewing, water-submersion, or exposure to high temperatures (+110°F);
 - The problem is due to improper repairs or adjustments made by anyone other than the manufacturer;
 - The device is used with another aerosol other than the Lurelogik spray refill.
- The warranty cannot, in any way, be used in cases of claims in damages.
- Out of warranty, the buyer will assume all costs relating to the purchase of parts, labor and shipping.

Radio Systems® Corporation assumes no responsibility for any loss, or any claims by third parties that may arise through the use of this product.

Any questions, comments or suggestions, please call our toll-free line – 800.303.0244

The Lurelogik™ Timer device is a patented device (US Patent No. 6216925). All rights reserved. Lurelogik is a trademark of Radio Systems® Corporation.

LURELOGIK™

Radio Systems® Corporation
10427 Electric Avenue
Knoxville, TN 37932

1.800.303.0244

www.lurelogik.com

LURELOGIK™

SPRAY TIMER DISPENSER



INSTRUCTION GUIDE



LURELOGIK™ SPRAY TIMER DISPENSER

Congratulations on your purchase of the Lurelogik Spray Timer Dispenser. Lurelogik scent dispersion systems for wildlife employ advanced technologies to manually and automatically attract animals to and from specific sites for an array of activities including hunting, photography and wildlife observation.

THE KIT INCLUDES

- A spray device
- An aerosol refill
- An attachment cord
- Easy to use instructions

PREPARATION

1. Remove the dispenser device and your scent refill can from packaging.
2. Remove the battery cover located on top of device by pressing down on cover (1) and sliding it back (2). Insert 4 AAA batteries (not included in kit) respecting polarity (3) before putting the cover in its original position (4).



3. Shake the refill can a few times. In a well ventilated area, place the TIMER on top of the refill can by pressing down firmly (5). While pressing down, slide the ring down (6) to secure the TIMER into position. Your TIMER is now ready to use.



4. Turn the TIMER on outdoors to test it. Set the TIMER at one minute, then set the desired time gap between each spray. Options are 1, 5, 10, 15, 30, 60 minutes, 2 or 4 hours.
5. We recommend the setting at 15 minutes when you are hunting and at every 4 hours when you are not at your hunting ground.
6. You should tie your TIMER at 4 to 6 feet above the ground, on a small tree, a branch or at your strategic location with the enclosed cord.

7. We suggest you spray approximately 3 to 5 consecutive sprays to saturate the area with the chosen scent. Take note that this will depend on the hunting ground, wind factor and the time you have entered your hunting ground.
8. Always turn off the TIMER and remove the batteries when not in use.
9. To remove the TIMER from the aerosol can, press down the TIMER on the refill can and lift the holding ring (9,10). **Remove batteries when storing away.**



Note: Refill cans are available in other lure/scents, such as, Doe Estrous and Buckalure.

You can have success if you follow these simple instructions:

- Accustom yourself to the hunting ground. Pre-season scouting is very important in harvesting an animal. Pre-season scouting can give you clues to bedding and feeding patterns, game trails and watering holes. Patterning deer by thorough scouting will make you a more successful hunter.
- When you are scouting for deer during the hunting season, you need to look for key things. Look for fresh deer droppings and fresh tracks. Look for well used deer trails and feeding areas. Also look for buck rubs on trees and buck scrapes on the ground. When you find all of these key things, you know you have found a good place to hunt.
- Analyze the wind direction. Air currents carrying scent can have a big effect on your hunting. Always check which way the wind is blowing. The reason is so that the deer will not smell your scent on the air currents. If they do smell your scent, they will turn around and leave or bed down. They might bed down and watch you for as long as you stay at your stand.
- You should use the down wind to favor the odor from your device.

IMPORTANT REMARKS

1. **The Spray Timer Dispenser is not a toy. Keep it away from the reach of children. Use it only as directed. Do not use indoors.**
2. Do not pierce this container, heat it or dispose of it in a fire. It could explode.
3. Your TIMER is water resistant, but not completely waterproof. Do not leave it at hunting sites for extended periods. Remove it each time you leave the hunting ground.
4. Keep your TIMER clean at all times and wipe it carefully before storing away.

5. For added protection, you can cover the clamp ring with camouflage tape.
6. Never use other aerosol products other than Lurelogik. Using any other substances will void the product's guarantee.
7. Do not expose the device to freezing temperatures or to conditions warmer than 110°F. Be particularly careful not to leave the device in direct sunlight, either by a window or in a car on a summer day, etc. Never leave the device in a car where the device can heat up to very high temperatures.
8. Do not attempt to repair the device yourself. This will invalidate the warranty. If the Timer Dispenser does not work, call our toll-free customer service: **1-800-303-0244.**
9. See aerosol refill for additional information.

TIPS AND TRICKS

- Remember that deer will usually move in the wind direction. Always place your stand down wind of the place where you expect to see a deer. The reason is so that the deer will not smell your scent on the air currents.
- You must cover your human scent. We suggest you wear gloves before manipulating the TIMER device.
- To determine the wind direction, we suggest you squeeze a bottle filled with unscented talcum powder. The drift of the powder will instantly give you the wind direction.
- Wash all of your clothes with baking soda. Then take an old sock that has no holes in it, put some baking soda in it and tie the end shut before drying your clothes. Store all of your clothes in a scent free bag with the sock.
- Rubber boots are suggested for good scent control. Leather boots are not recommended because they absorb and carry human odors.
- Another effective way to eliminate your odor is to take a pillow case and fill it with leaves, dirt, acorns or what you can find in the hunting area. Throw it in the dryer, along with your clothing, for ten to fifteen minutes.

